

# Using Micro SD Card with your Allegro MX

## Micro SD Cards

A Micro SD card holder is located at the back of the unit.

**CAUTION:** Installing a card improperly can result in damage to the unit not covered by the warranty.

### Installing a Micro SD Card

To install a Micro SD card complete the following steps:

1. Use a screwdriver to open the back compartment door.
2. Gently lift the flap located in the top right corner of the board protector.
3. Slide the Micro SD card door to the left to open it.




4. Slide the Micro SD card INTO the door with the connectors facing down and outward.

**CAUTION:** Do not place the Micro SD card directly into the board connector. The card reader and the card may be damaged.



5. Gently shut the door and slide it to the right to lock it.

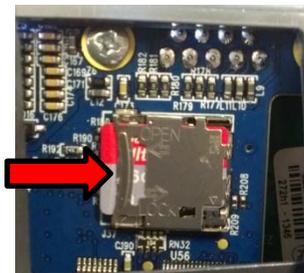

6. Close the flap in the board protector and securely reattach the back compartment door.
7. For the card to be recognized, suspend and resume or reset the Field PC.

### Removing a Micro SD Card

To remove a Micro SD card, follow the steps outlined above starting with step 6 in reverse order.