


Where to save your PDFs on the Allergo MX

Using Windows XP and Microsoft Active Sync:

1. For Windows XP users, establish an **Active Sync Connection** with your PDR. Look for this Icon in the lower right corner of your monitor  right click on the icon and select **Explore**.

2. Click on **My Windows Based Mobile Device**  , and then navigate to the folder that you want to save the PDF file into. It is recommended to use the SD card provided with your Allergo MX

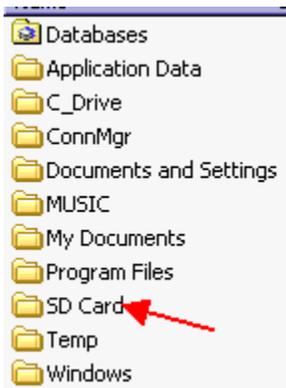

If you have subfolders navigate to the destination folder and open the folder, leave this window open.

3. Copy and Paste or Drag and Drop the converted PDF file the desired location.

Using Windows 7 and Microsoft Mobile Device Center:


1. For Windows 7 users, establish a connection with Mobile Device Center with your PDR the following connection window should automatically appear. Verify you are connected and click on the **“Connect without setting up your device”**




2. Click on **File Management**, then click on **“Browse the contents of your device”**



3. Click on the **SD Card**

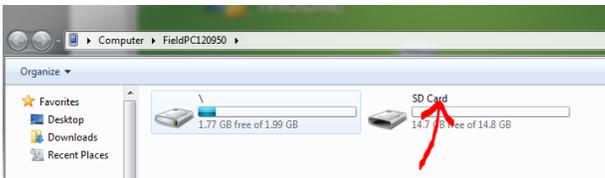

If you have subfolders navigate to the destination folder and open the folder, leave this window open.

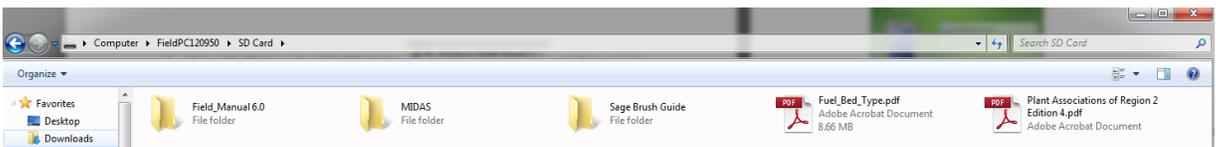

4. Copy and Paste or Drag and Drop the converted PDF file to the desired location.